



Note: Trim windshield
as necessary to fit



Subler--bottom only

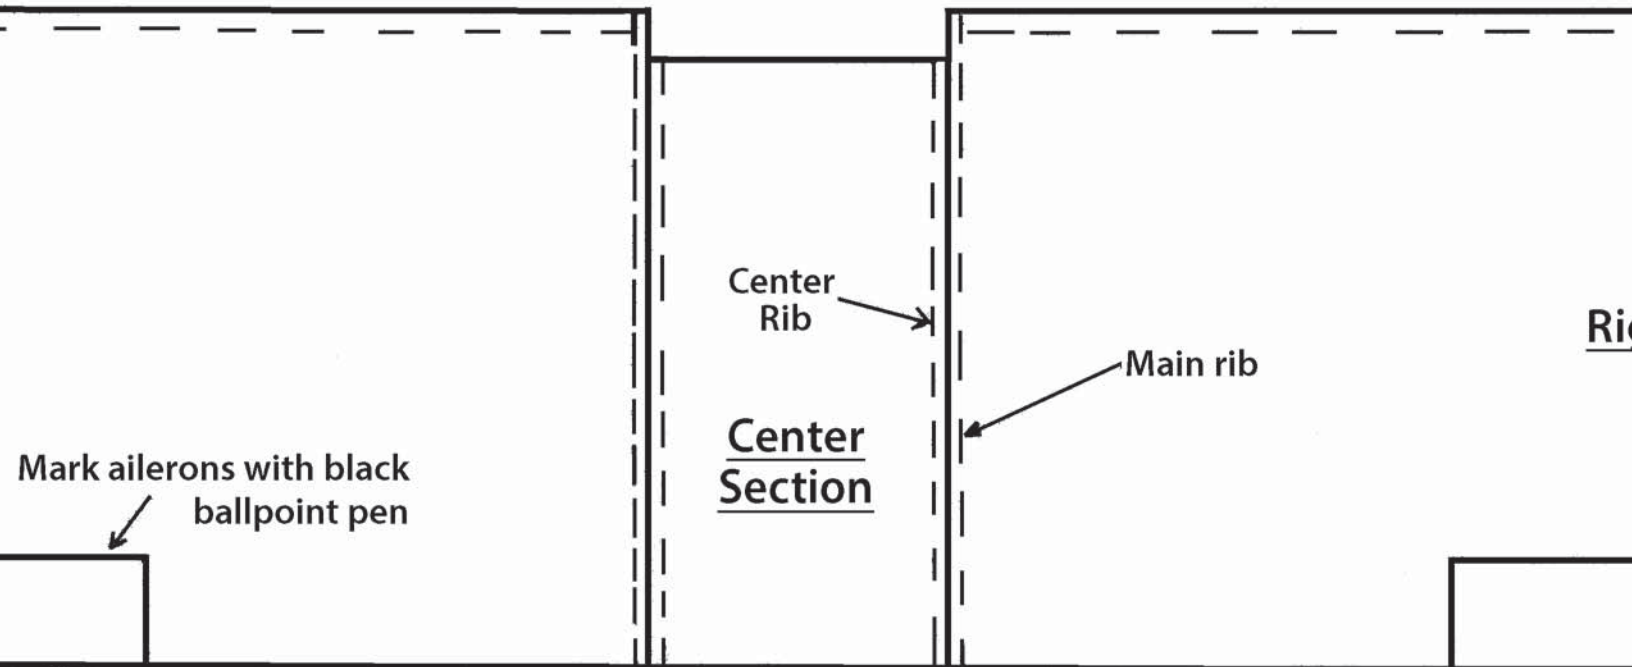

Mark ailerons with black ballpoint pen

Center Rib

Main rib

Center Section

Ri



rib Pattern--2 required





Center Rib--2 required



Cam

F-3

F-4

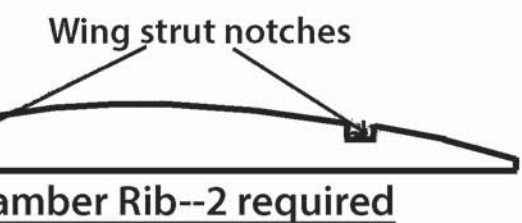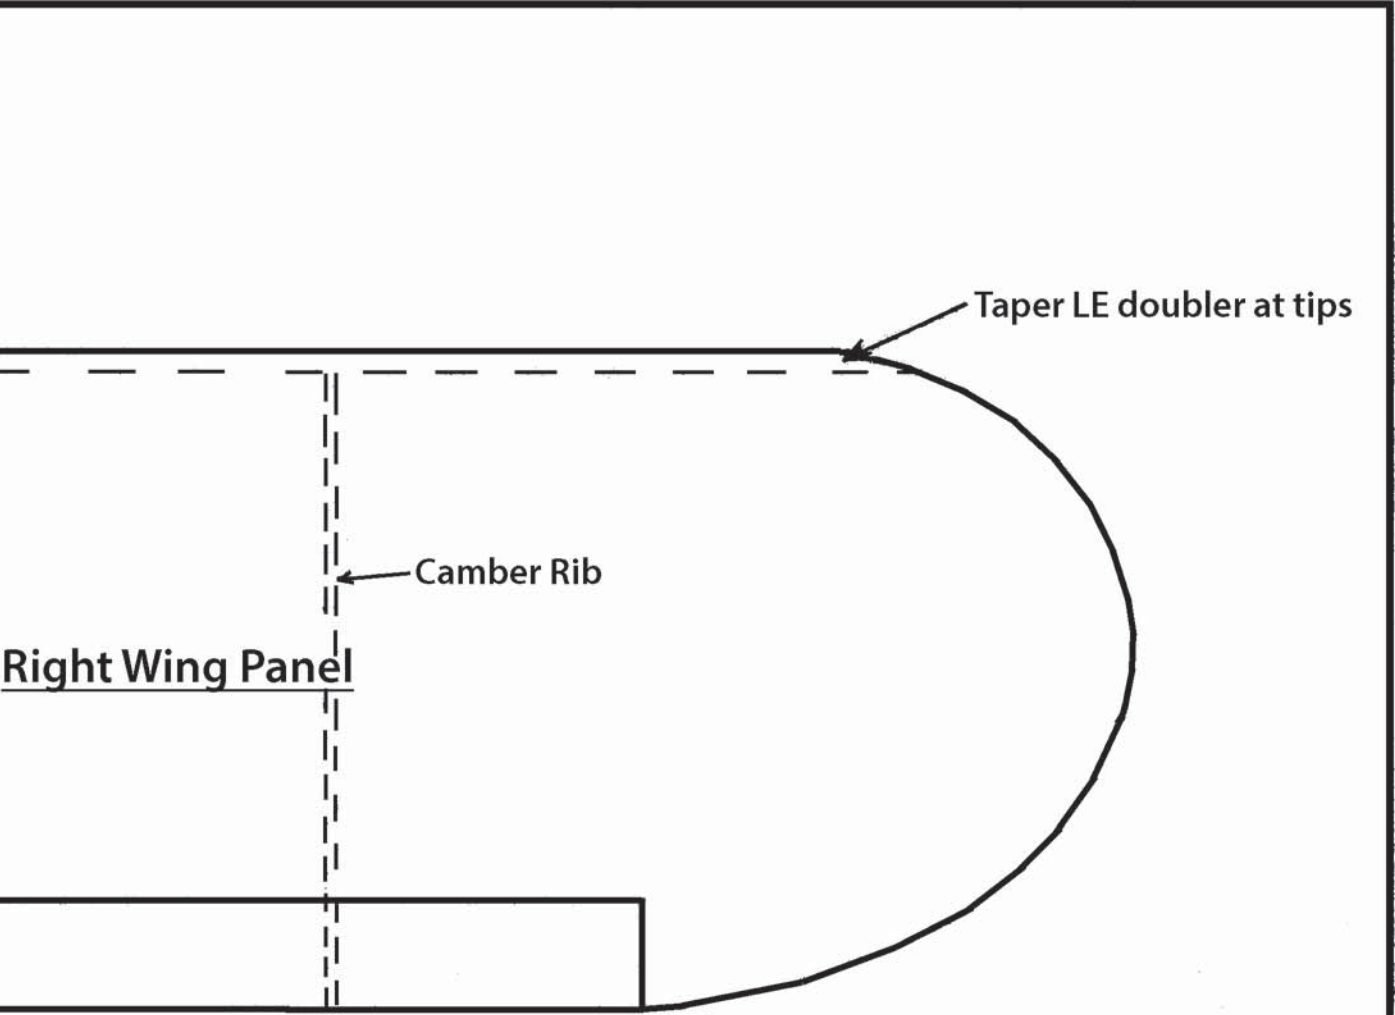

Note: Unless otherwise indicated, all parts are of 2mm Depron






Rear Top Deck


F-1
(Open for
motor
mount)


3 laminations



Open to accommodate motor

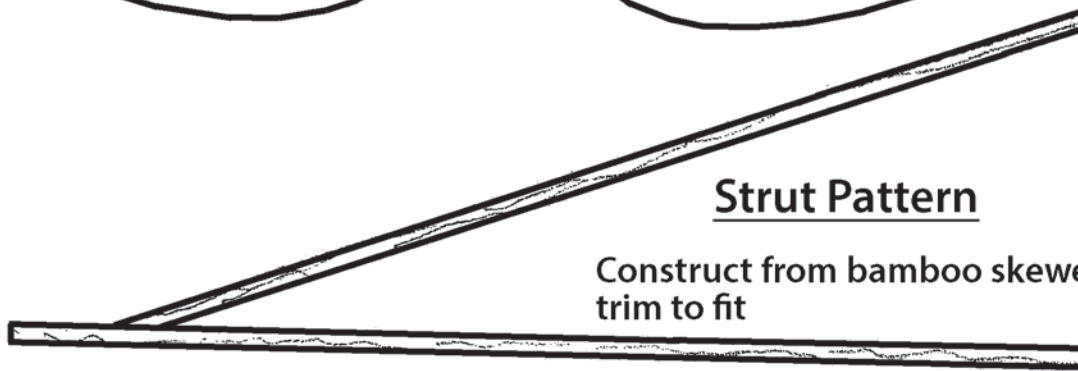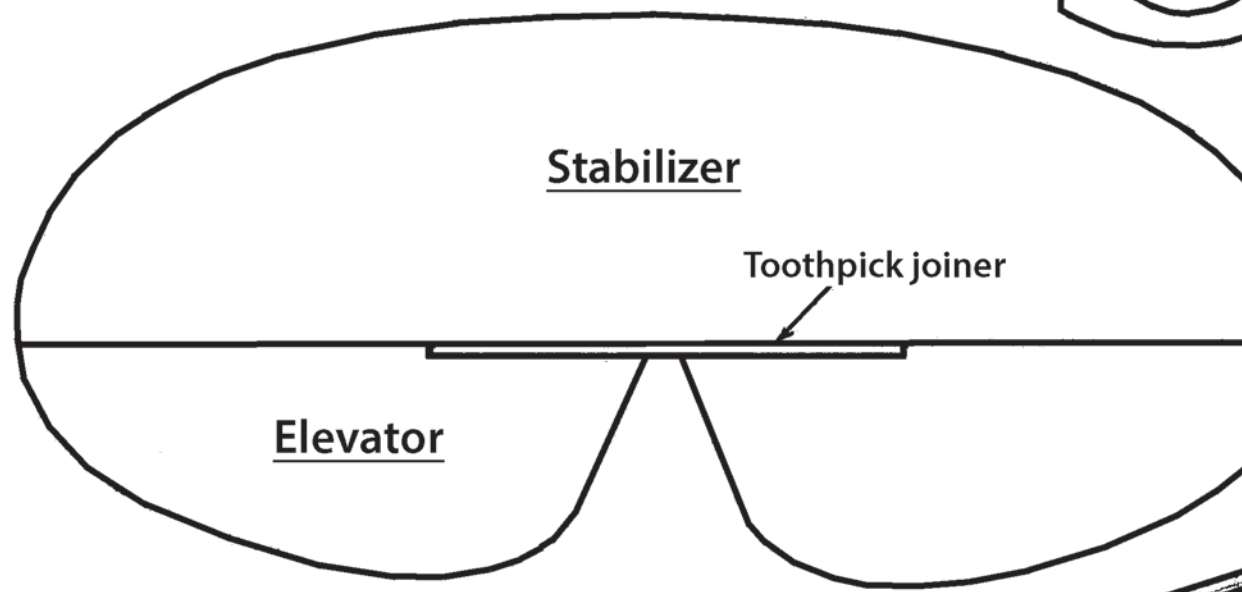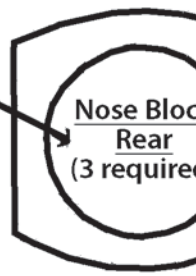

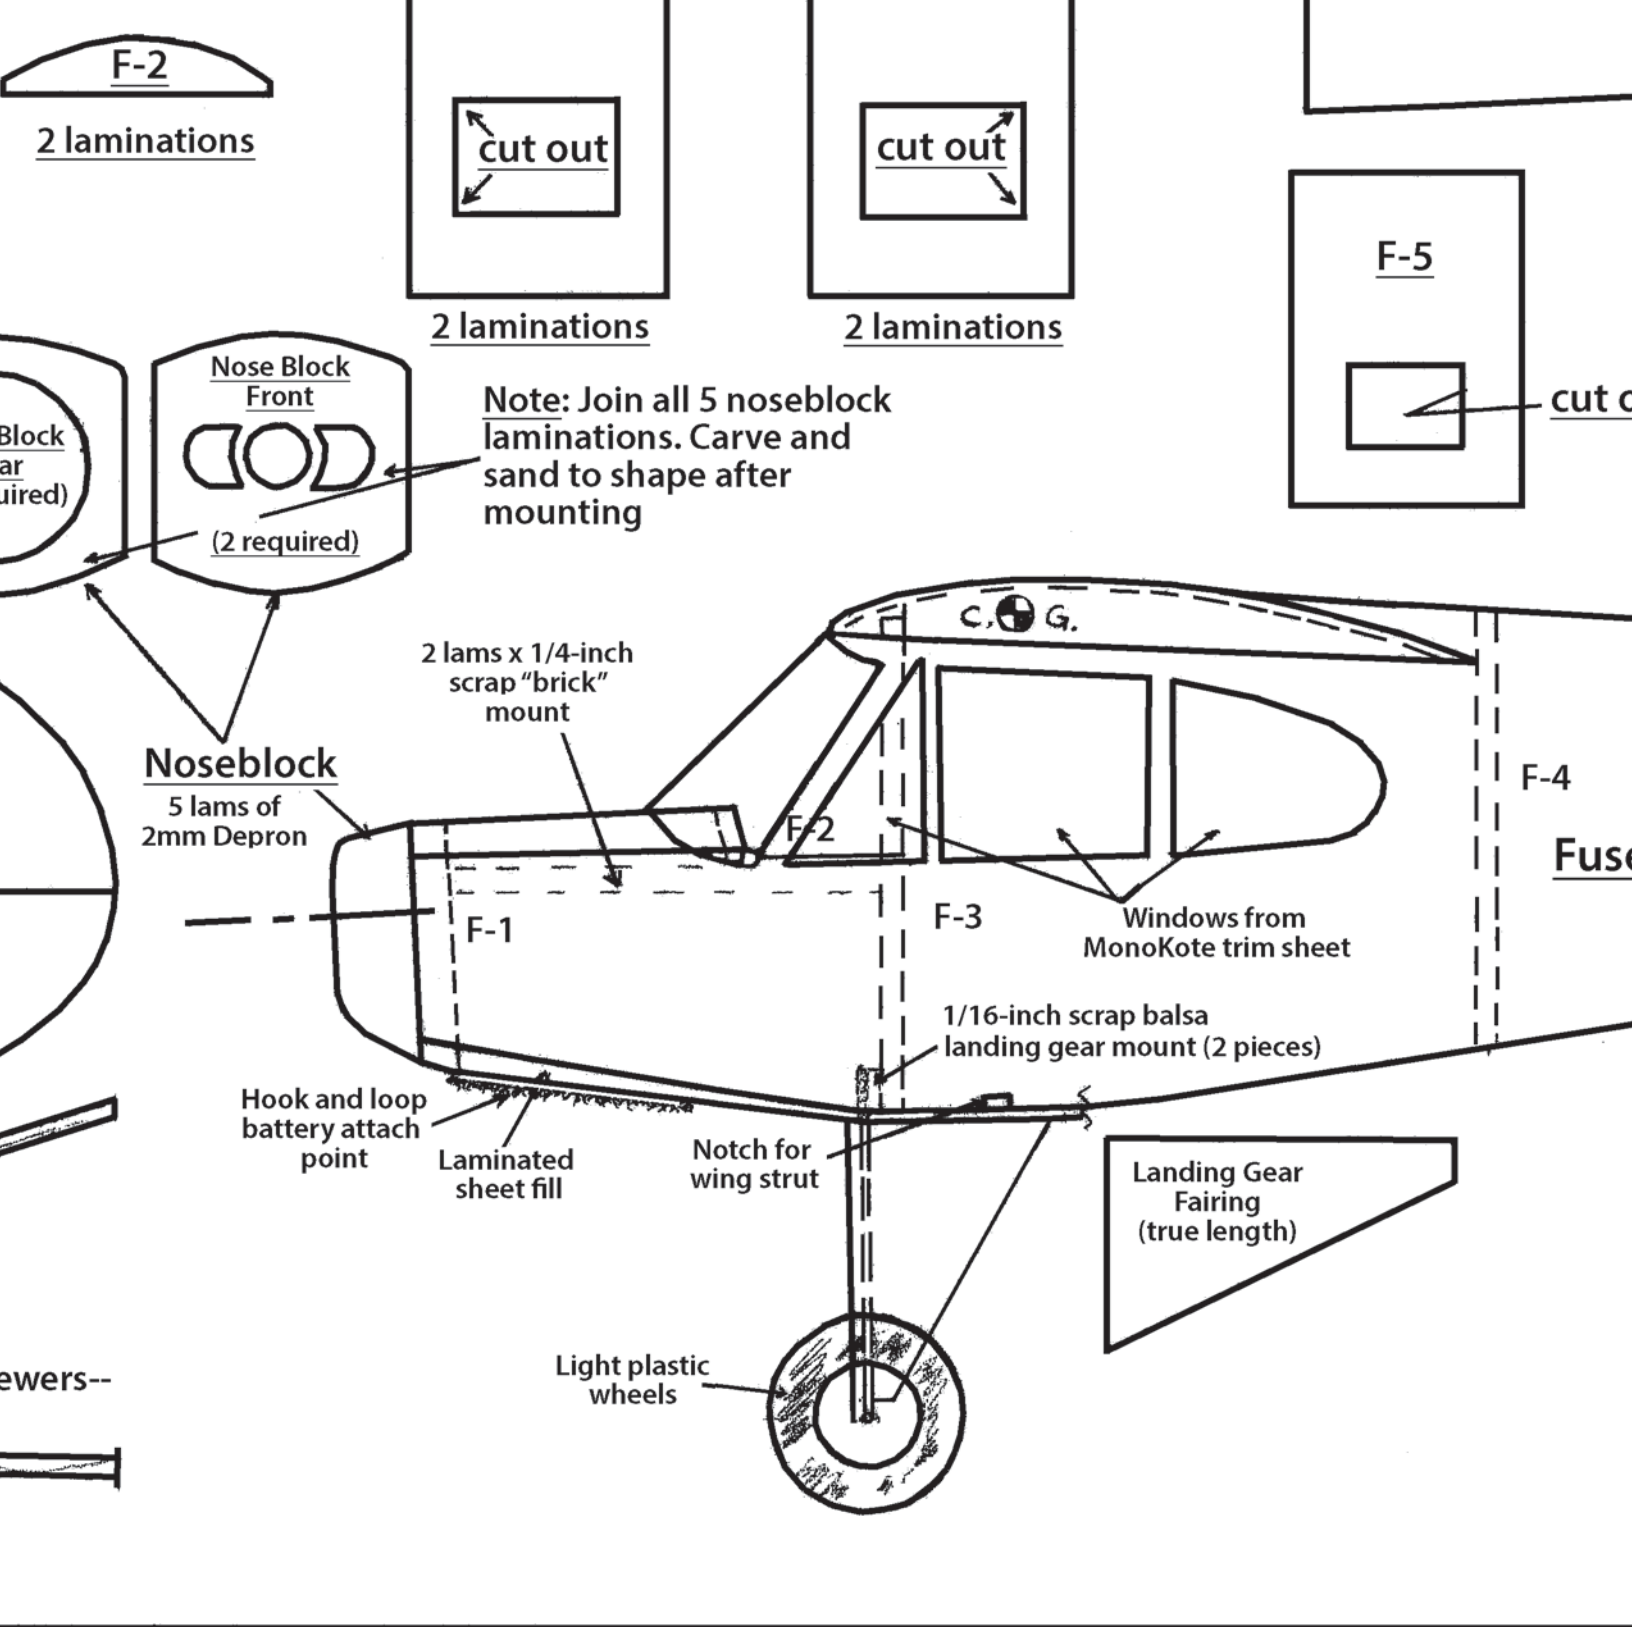

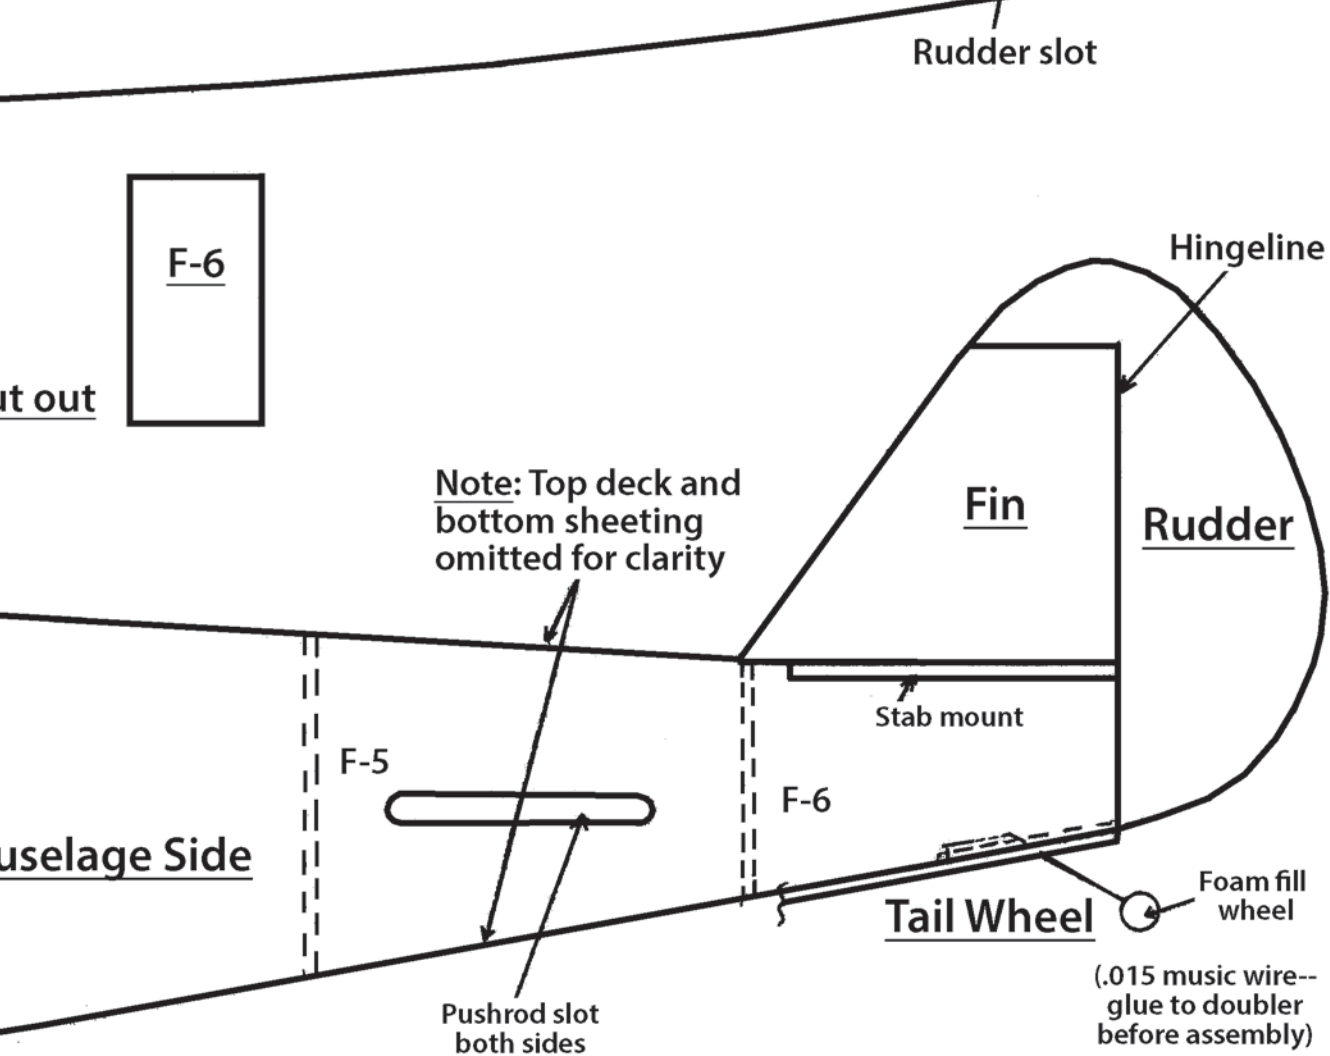

(.015 music wire--
glue to doubler
before assembly)

Micro "Super Cub"

For indoor and outdoor flying
20-inch wingspan
35 grams, less battery

Designed and drawn by:
Larry Kruse April 2016